

SKINGUARD®


QUICK REFERENCE GUIDE



agility™



 **POWER** Press the POWER button to turn on/off the control unit.

 **ADJUST SETTINGS** Press the ADJUST SETTINGS Up/Down arrows to adjust the mattress pressure levels. (Use the weight settings guide as a reference/starting point.)


LOW AIR LOSS The system automatically provides continuous low air loss therapy by supplying air into the low air loss section of the mattress.

 **STATIC** Press the STATIC button to maintain a constant pressure level.


 **AP TIMES** Press AP TIMES button to activate Alternating Pressure Therapy Mode and to set the time.

 **PULSE** Press the PULSE button to activate Pulse Mode.

 **MAX INFLATE** Press the MAX INFLATE button and the mattress will rapidly inflate. Max Inflate will deactivate after 15 minutes.

 **FOWLER** Press the FOWLER button to activate Fowler Mode. Fowler will increase the air pressure in the mattress during fowler position to avoid patient bottoming out.

 **ALARM SILENCE** Press the ALARM SILENCE button to mute the audio alarm.

 **LOCK** Press and hold the LOCK button and all control unit functions will be locked to prevent tampering of patient settings. Press and hold LOCK button to turn off.

SAFETY AIR PAD

The 2" safety air pad will remain inflated should the mattress deflate.

Please read user manual for further information.

 
For further questions, contact your local Agility office or call **1.800.847.7368**

©2021 Agility Health, Inc. SKINGUARDQRG.0721



CPR

For CPR or quick deflation, rotate the CPR Valve to open and power off the control unit.

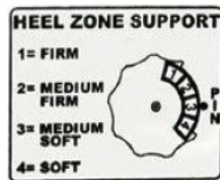


HEEL ZONE

The Heel Zone (bottom four air cells) can be adjusted independently from the rest of the mattress. Turn the Heel zone regulator valve to select the appropriate patient setting.

1. FIRM
2. MEDIUM FIRM
3. MEDIUM SOFT
4. SOFT

 
LENGTH EXPANSION (both Standard and Bariatric)

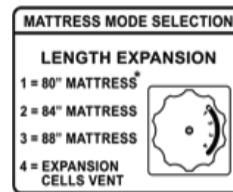

Length Expansion Regulator

Turn the Length Expansion Regulator valve to select the appropriate length. Select #4 or return to #1 to deflate added air cells.

 WIDTH EXPANSION (Bariatric)

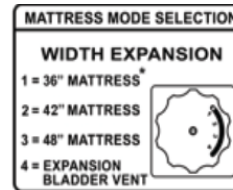

Width Expansion Regulator

Turn the Width Expansion Regulator valve to select the appropriate width. Select #4 or return to #1 to deflate added air cells.