

QUICK REFERENCE CARD



BED OVERVIEW

A Main nurse controls


- Lockouts
- Bed movements
- Scale & bed exit
- · Battery indicator

Bed exit side view lights (on foot bumpers)

- Green = Bed exit system is armed
- Flashing amber = In alarm
- Not illuminated = System not in use

Bed extender

- Reach & pull on green handle
- Pull to extend & push to retract
- Set to desired length and lock
- Install cushion

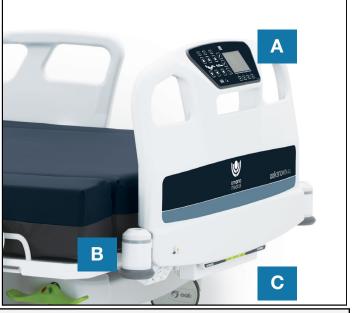

REMINDERS

Ensure bed is plugged in to enable scale, bed exit & advanced features




Apply the brakes



Infinite[™] Width Expansion System

• Pull out crank and turn 💙 to expand or 🧲 to narrow patient surface (Crank will retract automatically)

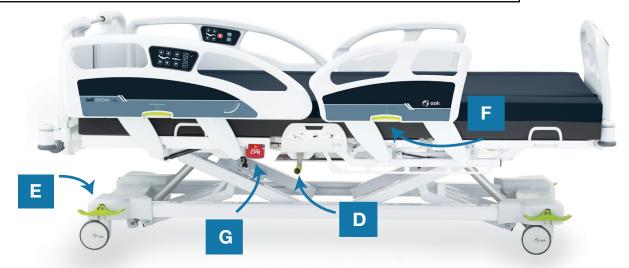

E Brake pedals

- Push red = Brake ON
- Push green = Steer ON
- Horizontal = Neutral position (Bed is fully mobile)

F Siderail release

- Lift green handle UP to unlock
- Lower siderail down

Green window indicates safe status
Red window indicates unlocked siderail

G CPR release handle

- Pull red handle
- Completely lower backrest section Seat section will automatically retract flat. Press any button to cancel


Please refer to the user manual for detailed instructions, safety measures and warnings.



HOME button on the footboard returns the display to HOME SCREEN / MAIN MENU



NAVIGATION buttons on footboard will activate controls

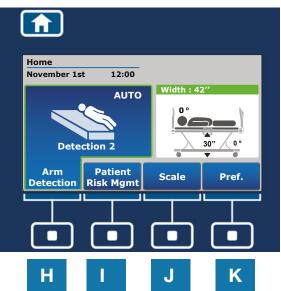


To change BED EXIT detection level

Bed alarm must be off to make changes.

To change or set DETECTION LEVEL From the HOME SCREEN, Press Patient Risk Mgmt

Press Select

 Press to scroll through detection level options and press "Select detection" to select desired level.



J To ZERO the SCALE

From HOME SCREEN

Press "SCALE" button

Press (Press once to scroll to zero)

Press select to zero

Press "START" to confirm

IMPORTANT: Patient must not be on bed during procedure.

J SCALE - to weigh patient

From HOME SCREEN, Press "SCALE"

Press "SELECT"

Press

weigh to display weight

Weight log screen informs of patient's logged weights.

Preference menu

Width management, Lights configuration, Lockouts, ID, Auto-Contour, Minimum height adjustment, Date/time, Languages and Maintenance.

To arm/disarm BED EXIT system (regular/manual setting)

(1) To arm BED EXIT

Patient must be in bed to arm bed exit system. From HOME SCREEN

Press "ARM" H

Press "YES" (To arm bed exit)

Verify that foot end bumper side view lights (optional) are illuminated green. When they are, bed exit system is "ARMED".

(2) To disarm BED EXIT (if alarm is triggered) Press "DISARM" (on HOME SCREEN). This will turn off the system. Patient must be placed back in bed and system must be manually rearmed.

To arm/disarm BED EXIT system (AUTO Arm)

When Auto Arm is activated and patient is detected in the bed, the bed exit is armed automatically.

To disarm BED EXIT (if alarm is triggered):

Press "DISARM" (which will appear on the HOME SCREEN). This will turn off the alarm.

If patient is out of bed:

н

The system will return to stand-by mode.

If patient is still in bed:

The system will apply a 1-minute care PAUSE to allow the caregiver to attend to the patient. If after 1 minute the patient is still in bed, the system will automatically initiate arming procedure.

To turn ON/OFF AUTO Arm

From HOME SCREEN, Press Risk Mgmt





Press "SELECT" to enter Select Detection Menu Press "Auto Arm" to activate or deactivate it.

To change ALARM settings

Alarm must be off to change settings. From the HOME SCREEN

Press "Patient Risk Mgmt"

Press

Press "Select" to enter Alarm Settings menu Make desired changes and press "OK" to save changes.

For immediate assistance, please contact your local account executive.