Shuttle[™] A and B Series Quick Reference Guide



This card is not meant to replace product user manual. For complete manual, contact Sizewise.

800-814-9389 sizewise.com



Components





 Loosen knob and raise/lower armrest to desired height; re-tighten knob

Leg Rest Adjustments



To flip push bar: push button to release latch and flip bar until locked

 
Chair Up/Down

Chair Up Down



Seat Assist





Recline







- Device must be in Table position to adjust Table Height function

Battery Operation

- Device uses 115 VAC or battery power. Plug into AC power source to charge.
- Indicator light mounted on left side of base

Trendelenburg



Trendelenburg

- Lock casters
- Use seatbelt
- Flip foot plates and push bar up
- Raise armrest
- Place chair in Table position



Reverse Trendelenburg



Casters

*Always lock casters prior to operation or patient transfers.

- Steer: Green indicator pushed down
- Neutral: Lever in a flat/level position
- Brake: Red indicator pushed down

B Series:

- Steer: Pedal raised
- Neutral: Pedal flat/level
- Brake: Pedal down







sizewise.com 800-814-9389